 


## C101 comparison sheet



No	02-04 RSX	05-06 RSX	03-06 Element
1	GRN/WHT reverse lights	GRN/WHT reverse lights	BLK/WHT AFS heater control (A10)
2	YEL reverse lights power	YEL reverse lights power	BLK/YEL power for AFS relay and sensors
3 *	WHT/GRN VSS signal (VSS)	X (See step 7 E Plug)	X
7	Radiator fan switch	Radiator fan switch	X
8	X	X	X (See step 7 E Plug)
9	BLK/YEL power for AFS relay and sensors	BLK/YEL power for AFS relay and sensors	YEL reverse lights power
10	BLK/WHT AFS heater control (A1)	BLK/WHT AFS heater control (A10)	GRN/BLK reverse lights
11	X	X	BLK/WHT or BLK/RED Power for coils and sensors
12 *	X	GRN/WHT RVS lockout RSX Type S (Connect to E2)	RED AFS+ (A31)
13	RED/YEL AFS- (A16)	RED/YEL AFS- (A28)	YEL/RED Low oil pressure indicator
14	YEL/BLK Power for injectors and sensors	YEL/BLK Power for injectors and sensors	X
15	WHT AFS heater power (AFS relay, A22)	Not connected on engine harness side	BLK/WHT Starter wire
16	BLK/WHT Starter wire	BLK/WHT Starter wire	GRN/BLK SG2 ECU A23
17	Not used on male side	Not used on male side	YEL/BLK Power for injectors and sensors
18	YEL/RED Low oil pressure indicator	YEL/RED Low oil pressure indicator	BLU AFS- (A28)
19	RED AFS+ (A6)	RED AFS+ (A31)	X
20	BLK/WHT Power for coils and sensors	BLK/WHT Power for coils and sensors	X

\* Hasport harness conversion