 


## C101 Conversion to 01-05 Civic LX/DX with Automatic



C101 Diagram Female looking at wire side.  
Male looking at terminal side.


No	01-05 Civic FEMALE	Instructions
1	AT controls BLU/BLK	Remove, no longer used
2	AT controls RED/BLK	Remove, no longer used
3	Clutch pedal position for starter solenoid	Add wire to clutch pedal switch connector (on when pedal pressed) Also add ground wire to clutch pedal switch connector
6	VSS Signal BLU/WHT	Connect to C101 RSX Male connector #3
7	FANC GRN	Connect to C101 RSX Male connector #7
11	Reverse (Back up lights) WHT	Connect to C101 RSX Male connector #2
12	Clutch pedal position for cruise control	Add wire to second clutch pedal switch (on when pedal released) Also add ground wire to clutch pedal switch connector
16	Starter signal	Connect to C101 RSX Male connector #16
17	Power for sensors BLK/YEL	Connect to C101 RSX Male connector # 9 Also Add wire to AFS Relay #85
18	Oil Pressure YEL/RED	Connect to C101 RSX Male connector # 18
19	ECU power YEL/BLK	Connect to C101 RSX Male connector #14
20	Injector Power BLK/WHT	Connect to C101 RSX Male connector #20
No	01-04 RSX MALE	Instructions
1	Back up lights BLK	Add new wire to ground
10	AFSHTC BLK/WHT	Add wire to AFS connector #4

\* Hasport harness conversion

## C101 Conversion to 01-05 Civic LX/DX with Automatic

No	01-05 Civic FEMALE	Instructions
13	AFS(-) RED/YEL	Add wire to AFS connector #2
15	AFSHTC+ WHT	Connect to AFS connector #3 Also add wire to AFS relay #87
19	AFS RED	Connect to AFS connector #1
Additional Wiring		Instructions
	WHT/RED	Add wire with constant power to AFS relay #30
	ORN	Add wire tfrom ECU E plug #8 to AFS relay #86

AFS relay  
wiring

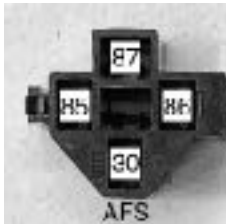

ECU E Plug



Air Fuel Sensor  
Wiring



\* Hasport harness conversion