


Reverse Lockout Wiring

RVS wiring is dependent on ECU

Power for RVS Solenoid BLK/
YEL wire
Connect to any BLK/YEL wire
in engine harness.
(Do not use an always hot
wire)

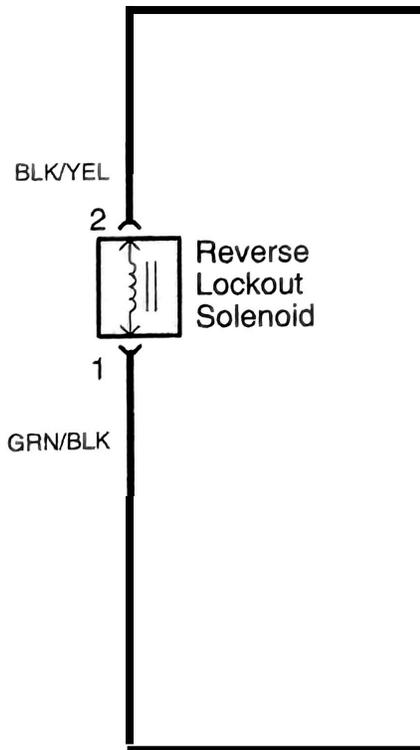

Activation for RVS

01-04 RSX Type S ECU with or without Hondata
ECU B7
05-06 RSX Type S ECU E2
04-08 TSX ECU B2
02-04 CRV or 02-04 RSX base model B22
05-07 Accord with KTuner, consult KTuner
All other ECUs use a momentary off switch to
provide ground RVS activation