



## 06-11 Civic C101 Conversion

### Cabin Side of Harness Wire View

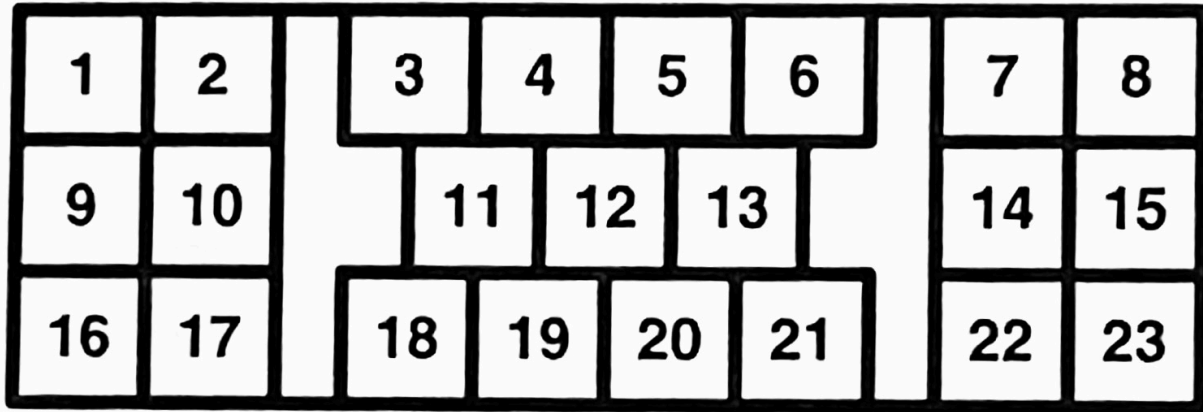

### Engine Side of Harness wire View

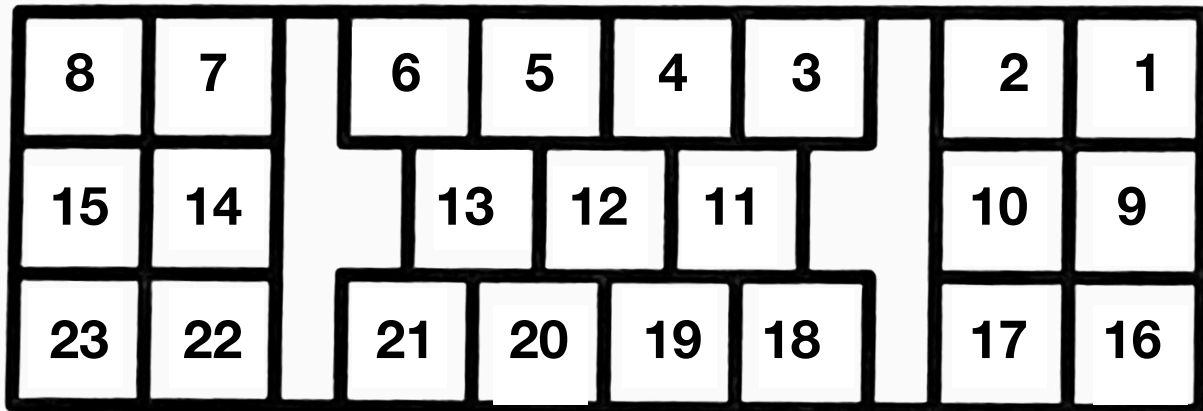

C=chassis E=Engine

	DX, LX, EX MANUAL	DESCRIPTION	ACTION
1	YEL	BACK UP LIGHTS FUSE 10	C-SIDE > E-SIDE 1
2	NOT USED		
3	NOT USED		
4	BLK/YEL	FUSE 3 POWER FOR ALTERNATOR AND SHO2S	C-SIDE > E-SIDE 17 SPLICE SHO2S #4

## 06-11 Civic C101 Conversion

	<b>DX, LX, EX MANUAL</b>	<b>DESCRIPTION</b>	<b>ACTION</b>
5	NOT USED		
6	NOT USED		
7	NOT USED		
8	WHT/GRN	BACK UP LIGHTS	C-SIDE > E-SIDE 8
9	WHT/BLK	POWER FOR AFS	C-SIDE > AFS CONNECTOR #4
10	NOT USED		
11	BLU/RED	HVAC	C-SIDE > E-SIDE 11
12	BLU/WHT	HVAC	C-SIDE > E-SIDE 12
13	BLU	HVAC	C-SIDE > E-SIDE 13
14	NOT USED		
15	NOT USED		
16	BLK/WHT	IGNITION SYSTEM COIL POWER RELAY	C-SIDE > E-SIDE 16
17	BRN/YEL	G101 GROUND	C-SIDE > E-SIDE (3), 4 (5, 6)
18	NOT USED		
19	NOT USED		
20	NOT USED		
21	WHT/GRN	ETCS CONTROL RELAY ECU C1	C-SIDE > E-SIDE 21
22	BLK/YEL	FUSE 2 ECU POWER	C-SIDE > E-SIDE 22
23	YEL/BLK	ECU, INJECTOR AND SENSOR POWER FROM MAIN RELAY	C-SIDE > E-SIDE 9

## 06-11 Civic C101 Conversion

	<b>AFR Sensor FEMALE</b>	<b>DESCRIPTION</b>	<b>Si</b>	<b>ACTION</b>
1	GRN	AFS- ECU C30	RED/YEL	ENGINE SIDE C101 #15 FROM C30
2	RED	AFS+ ECU C27	RED	ENGINE SIDE C101 #14 FROM C29
3	BLU	AFSHTC ECU C9	GRN	ENGINE SIDE C101 #19 FROM C9
4	PUR	HEATER POWER PGMFI SUB-RELAY	PUR	CAR SIDE CONNECT TO C101 #9
	<b>SHO2S FEMALE</b>	<b>DESCRIPTION</b>		<b>ACTION</b>
1	BLK	SG6 ECU A9	BLK	ADD SPLICE FROM ECU A9 TO C101 #___
2	WHT	SHO2S SENSOR INPUT ECU C27	WHT/RED	ENGINE SIDE C101 #23 (16) from C27
3	PNK	SHO2SHTC B4	BLK/WHT	ENGINE SIDE C101 #18 (21) from B4
4	YEL	HEATER POWER 12V FUSE 3	BLK/YEK	CAR SIDE C101 #6 (5) from FUSE 3