


## Universal K-series Honda Adapter Harness for Hondadata


02-04 RSX manual engine harness.

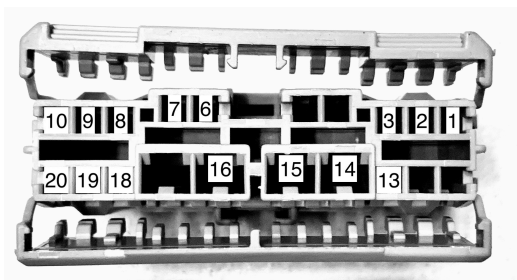

### C101 Connector


Number	Color	Gauge & Length	Termination
1	GRN/WHT	20ga 72"	Back-up Lights
2	YEL	20ga 72"	Back-up Lights 12V+
3	WHT/GRN	20ga 72"	Vehicle Speed Sensor
6	YEL/GRN	20ga 72"	Water Temp
7	GRN	20ga 72"	Radiator Fan Relay Control
8	WHT/BLU	20ga 72"	Alternator Charging Lamp
9	BLK/YEL	20ga 12" 20ga 72"	Air Fuel Sensor Relay #85
10	BLK/WHT	20ga 44"	Air Fuel Sensor #4
13	RED/YEL	20ga 44"	Air Fuel Sensor #2
14	YEL/BLK	20ga 72"	Power for ECU A2, A3
15	WHT	20ga 12" 20ga 44"	See AFS Relay #87 Air Fuel Sensor #3
16	BLK/WHT	14ga 72"	Starter Signal
18	YEL/RED	20ga 72"	Low Oil Pressure Lamp
19	RED	20ga 44"	Air Fuel Sensor #1
20	BLK/WHT	20ga 72"	12V+ Switched

## Universal K-series Honda Adapter Harness for Hondadata

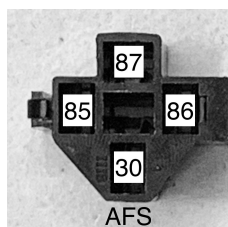

### AIR FUEL SENSOR RELAY

Number	Color	Gauge & Length	Termination
85	BLK/YEL	20ga 12" 20ga 12"	See C101 #9 E Plug #9
86	ORN	20ga 12"	E Plug #8
87	WHT	20ga 12"	C101 #15
30	WHT/RED	20ga 72"	12V+ Constant

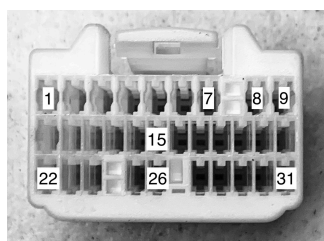

### ECU E PLUG

Number	Color	Gauge & Length	Termination
1	GRN/YEL	20ga 72"	Fuel Pump Relay Control
7	RED/YEL	20ga 72"	Main Relay Control
8	ORN		See AFS Relay #86
9	BLK/YEL	20ga 12" 20ga 72"	C101 #9
15	GRN/RED	20ga 72"	ELD
22	WHT/BLK	20ga 72"	Brake Switch
26	BLU	20ga 72"	Tach Signal
31	GRN/ORN	20ga 72"	Malfunction Indicator Lamp

## Universal K-series Honda Adapter Harness for Hondadata



### AIR FUEL SENSOR PLUG

Number	Color	Gauge & Length	Termination
1	RED		See C101
7	RED/YEL		See Main Relay #86
8	WHT		See AFS Relay #86
9	BLK/WHT		C101 #9

### ENGINE SUB HARNESS

Number	Color	Gauge & Length	Termination
1	GRN	20ga 72"	Round 2 pin sensor HD-090 Unsealed Female
2	BLK	20ga 20"	Round 2 pin sensor .25" Ring Terminal
BULLET	YEL/GRN	20ga 72"	4.5MM Female Bullet HD-090 Unsealed Female
	WHT/BLU	20ga 20"	HD-090 Unsealed Female Scotchlok to B12 ALT-L